

UNIT_CLEAR

Type:

System command

Description:

Clears all the bits in the UNIT_ERROR system parameter. This command is typically used to reset a SYSTEM_ERROR raised by EtherCAT or to reset module errors from MC664 option modules.

Motion Coordinators with an LCD display will show Unn when there is a UNIT_ERROR. UNIT_CLEAR can be used to reset the display.

Value:

This command takes no values

Example:

Example 1:

Clear the UNIT_ERROR bits and then check for which module or modules may be in error.

```
UNIT_CLEAR  
WA(10)  
PRINT UNIT_ERROR[0]
```

Example 2:

Reset SYSTEM_ERROR flags in the MC6N-ECAT as part of the error recovery routine.

```
IF SYSTEM_ERROR <> 0 THEN  
    UNIT_CLEAR ' attempt to clear the errors  
    WA(50)  
    IF SYSTEM_ERROR <> 0 THEN  
        PRINT "Error bits cannot be cleared: ";HEX(SYSTEM_ERROR)  
    ENDIF  
ENDIF
```

See Also:

[SLOT](#), [SYSTEM_ERROR](#), [UNIT_ERROR](#), [ETHERCAT](#)